## SPECIFICATIONS

### SMT519

## The SMT519 is a couple of S-Video/SMB cable for the SMT319

SUNDANCE MULTIPROCESSOR TECHNOLOGY LTD.

Revision Record				
Revision	Date	Change	Initials	
1	04/11/2004	Original Document	S.M.	

Document Title	SMT519	Document ID	SMT519_Specifications.doc		
Date	04/11/04	Revision	1.0	Page	1 of 4
© Sundance Multiprocessor Technology Ltd					

© Sundance Multiprocessor Technology Ltd

# Table of contents

Application note for SMT519 cables	3
SUNDANCE Custom cables	
S-Video connector	3
SMB connector	4
Cable	4
Connecting the cables to the TIM	4

Document	SMT519	Document	SMT519_Specifications.doc		
Title		ID			
Date	04/11/04	Revision	1.0	Page	2 of 4
© Sundance Multiprocessor Technology Ltd					

## Specifications for SMT519 cables

We assume that you have already read the SMT319 user guide.

#### SUNDANCE Custom cables

The SMT519 is a couple of S-Video/SMB cable for the SMT319 graphic-TIM:

• The input cable is built with a SMB connector and a S-Video plug



• The output cable is built with two SMB connectors and a S-Video plug



The SMT319 has one SMB input connector, and two SMB output connectors.

#### S-Video connector



The SMT519 cables have S-Video plugs. The S-Video connector (Socket front view) is describe on the following scheme:



- 1: Y-ground
- 2: C-ground
- 3: Y (luminance + synchronization)
- 4: C (chrominance Cr/Cb)

Document	SMT519	Document	SMT519_Specifications.doc		
Title		ID			
Date	04/11/04	Revision	1.0	Page	3 of 4
© Supdance Multiprocessor Technology Ltd					

© Sundance Multiprocessor Technology Ltd

#### **SMB** connector



The SMB connector used are straight.


#### **Cable**



Cable coaxial has an impedance of 50 ohms. You must specify the length of cable you need when ordering.

#### Connecting the cables to the TIM

On that picture, you can see how to connect the SMT519 Cable:

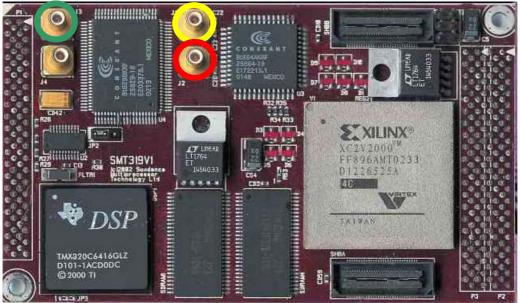

You should plug:

- The SMB connector, marked YC J3, of the input cable on the connector circled in GREEN
- The SMB connector, marked Y J1, of the output cable on the connector circled in YELLOW for the Y-component
- The SMB connector, marked C J2, of the output cable on the connector circled in RED for the C-component

Then, you can plug the S-Video connectors on a video input and a video output.

More information can be found in the video chips datasheets (references of the video chips is given in the SMT319 user guide).

Document Title	SMT519	Document ID	SMT519_Specifications.doc		
Date	04/11/04	Revision	1.0	Page	4 of 4

© Sundance Multiprocessor Technology Ltd