

SMT594v2

DC : R126, R131-132 = 200A
 DC : R144, R137-140 = 0A
 DC : R134 = Not Fitted
 DC : UII = Not Fitted

AC : R126, R131-132 = Not Fitted
 AC : R144, R137-140 = Not Fitted
 AC : R134 = Not Fitted
 AC : UII = Fitted (SCA-4-10)

